



**EURORACK MODULE**

**FUNCTION:** push interface for use with module A08 - WVR

**DIMENSIONS:** 2HP - 28 mm deep (including the inserted link connector)

**CURRENT DRAW:** powered by A08 - WVR

**BUTTON**

| LABEL            | TYPE | ACTION       | WHAT   |
|------------------|------|--------------|--|
| WHITE (no label) | push | momentary ON | when down, it sends positive gate to according WVR input       |
| BLACK (no label) | push | momentary ON | switches between the active input column (input #0>5 or #7>13) |

**LED**

| LABEL       | COLOR | WHAT                    |
|-------------|-------|-------------------------|
| arrow left  | red   | inputs 0 to 5 selected  |
| arrow right | green | inputs 7 to 13 selected |

**COMMENTS**  
 This module only connects to the A08-WVR. 2x8 IDC ribbon link cable.  
**!!! Don't connect to the PSU, you may damage the module or your PSU !!!**